

PROCESS AUTOMATION

Freelance 2019

Engineering Manual

Process Station - Rack System



PROCESS AUTOMATION

Freelance 2019

Engineering Manual

Process Station - Rack System

Document Number: 3BDD012503-111
Revision: A
Release: January 2019

Notice

This document contains information about one or more ABB products and may include a description of or a reference to one or more standards that may be generally relevant to the ABB products. The presence of any such description of a standard or reference to a standard is not a representation that all of the ABB products referenced in this document support all of the features of the described or referenced standard. In order to determine the specific features supported by a particular ABB product, the reader should consult the product specifications for the particular ABB product.

ABB may have one or more patents or pending patent applications protecting the intellectual property in the ABB products described in this document.

The information in this document is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this document.

Products described or referenced in this document are designed to be connected, and to communicate information and data via a secure network. It is the sole responsibility of the system/product owner to provide and continuously ensure a secure connection between the product and the system network and/or any other networks that may be connected.

The system/product owners must establish and maintain appropriate measures, including, but not limited to, the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, and so on, to protect the system, its products and networks, against security breaches, unauthorized access, interference, intrusion, leakage, and/or theft of data or information.

ABB verifies the function of released products and updates. However system/product owners are ultimately responsible to ensure that any system update (including but not limited to code changes, configuration file changes, third-party software updates or patches, hardware change out, and so on) is compatible with the security measures implemented. The system/product owners must verify that the system and associated products function as expected in the environment they are deployed.

In no event shall ABB be liable for direct, indirect, special, incidental or consequential damages of any nature or kind arising from the use of this document, nor shall ABB be liable for incidental or consequential damages arising from use of any software or hardware described in this document.

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party nor used for any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used, copied, or disclosed only in accordance with the terms of such license. This product meets the requirements specified in EMC Directive 2014/30/EU and in Low Voltage Directive 2014/35/EU.

Trademarks

All rights to copyrights, registered trademarks, and trademarks reside with their respective owners.

Copyright © 2019 by ABB.
All rights reserved.

Table of Contents

About this book

Use of warning, caution, information, and tip icons	7
Terminology.....	8
Document conventions	8

1 Process Station – Rack System

1.1 General	11
1.1.1 System overview	12
1.2 Operating System and EPROM Download	13
1.2.1 Boot EPROM Download.....	13
1.2.2 Operating system download	15
1.3 Configuring the D-PS or D-PS/RED Resource in the Project Tree.....	15
1.3.1 Inserting a D-PS or D-PS/RED resource	16
1.3.2 Inserting a task or redundant task.....	17
1.4 Processing and Error Handling.....	17
1.4.1 Automatic error handling at task level	17
1.4.2 Task error characteristics.....	19
1.4.3 Startup and shutdown performance of the modules	20
1.4.4 Power fail signal (PF) and no power fail.....	20
1.4.5 Power fail signal (PF) and power fail.....	20
1.5 Configuring the Process Station in the Hardware Structure.....	21
1.5.1 Inserting process stations	21
1.5.2 Allocating a resource.....	22
1.5.3 Inserting modules	23
1.5.4 Redundant process station.....	24
1.5.5 Defining parameters of the process station	25
1.5.6 Defining module parameters	31

1.6 Commissioning the Process Station	34
1.6.1 Resource in the project tree	35
1.6.2 Task	42
1.6.3 Program list (PL)	48
1.6.4 State displays in the project tree	49
1.6.5 Status displays in the hardware structure.....	49
1.7 Redundancy	53
1.7.1 General description of CPU redundancy	53
1.7.2 Configuration	60
1.7.3 Technical performance.....	63
1.7.4 Changing a not redundant process station into a redundant one.....	64

Index

About this book

Use of warning, caution, information, and tip icons

This publication includes **Warning**, **Caution**, and **Information** where appropriate to point out safety related or other important information. It also includes **Tip** to point out useful hints to the reader. The corresponding symbols should be interpreted as follows:



Electrical warning icon indicates the presence of a hazard which could result in *electrical shock*.



Warning icon indicates the presence of a hazard which could result in *personal injury*.



Caution icon indicates important information or warning related to the concept discussed in the text. It might indicate the presence of a hazard which could result in *corruption of software or damage to equipment/property*.



Information icon alerts the reader to pertinent facts and conditions.



Tip icon indicates advice on, for example, how to design your project or how to use a certain function

Although **Warning** hazards are related to personal injury, and **Caution** hazards are associated with equipment or property damage, it should be understood that operation of damaged equipment could, under certain operational conditions, result in degraded process performance leading to personal injury or death. Therefore, comply fully with all **Warning** and **Caution** notices.

Terminology

The Glossary contains terms and abbreviations that are unique to ABB or have a usage or definition that is different from standard industry usage. Please make yourself familiar to that.

You will find the glossary at the end of the *Engineering Manual System Configuration*.

Document conventions

The following conventions are used for the presentation of material:

- The words in names of screen elements (for example, the title in the title bar of a window, the label for a field of a dialog box) are initially capitalized.
- Capital letters are used for the name of a keyboard key if it is labeled on the keyboard. For example, press the **ENTER** key.
- Lowercase letters are used for the name of a keyboard key that is not labeled on the keyboard. For example, the **space bar**, **comma key**, and so on.
- Press **CTRL+C** indicates that you must hold down the **CTRL** key while pressing the **C** key (to copy a selected object in this case).
- Press **ESC**, **E**, **C** indicates that you press and release each key in sequence (to copy a selected object in this case).
- The names of push and toggle buttons are boldfaced. For example, click **OK**.
- The names of menus and menu items are boldfaced. For example, the **File** menu.
 - The following convention is used for menu operations: **MenuItem** > **CascadedMenuItem**. For example: select **File** > **New** > **Type**.
 - The **Start** menu name always refers to the **Start** menu on the Windows Task Bar.

- System prompts/messages are shown in the Courier font, and user responses/input are in the boldfaced Courier font. For example, if you enter a value out of range, the following message is displayed:

Entered value is not valid. The value must be 0 to 30.

You may be told to enter the string TIC132 in a field. The string is shown as follows in the procedure:

TIC132

Variables are shown using lowercase letters.

sequence name

1 Process Station – Rack System

1.1 General

Within the hardware structure the resources defined in the project tree are allocated to the hardware actually required. A scalable Freelance system essentially consists of the process and operator stations. These stations are allocated to resources according to IEC 61131-3 and serve as a structuring level in the project tree for allocation of the application program parts and displays to the hardware actually required.

The D-PS resource stands for a process station. This accepts the I/O modules for process control, and is essentially determined by the CPU module. The CPU module processes all programs of this resource, assigns a station number to the process station, and is the communication module to the system and the I/O units. The process station consists of the central unit and up to four I/O units. The central unit is always the station with the CPU module. The I/O units do not need an own CPU module: they can accept other I/O modules so that their numbers can be expanded (from 8 for the central unit) to a maximum of 44 for a process station. All units need a link module for feeding in the power supply and an identical rack for holding the modules.

A single software tool suffices for making all necessary configuration and commissioning actions from a PC. Graphical user interfaces are available for diagnosing.

Your automation task is configured in editors as per IEC 61131-3 and loaded online into the process station.

In order to facilitate the visualization of your process, powerful visualization packages like Freelance Operations are available for your process stations.

1.1.1 System overview

The system view shows the graphic view of the hardware structure.

The system bus (**Ethernet**) links the individual stations with each other. It transmits data between the process stations, the operator stations and the engineering station via coaxial or fiber-optic cables.

The station bus (**CAN**) links the main rack with other racks or I/O units.

The Engineering station is based on a PC or laptop with the Microsoft® Windows® 7 Professional/Enterprise SP1, (32-/64-bit) operating system and the Freelance Engineering software. It is used for system configuration, documentation and commissioning. After these tasks have been completed, it can be used remotely and for other purposes.

The Operator station is based on a PC with the Windows 7 Professional/Enterprise SP1, (32-/64-bit) operating system and the Freelance Operations operator station software.

Freelance Engineering and Freelance Operations can be used simultaneously on the same PC.

A scalable Freelance system consists of operator stations and process stations/FieldControllers. The process stations consist of a central unit and up to four I/O units.


Up to two printers can be connected to each PC.

The engineering station does not need to be activated separately. It is only used for displaying the network address.

Specific positions are assigned to the possible stations, either directly by double-clicking a position in the graphic view, or in a dialog when they are inserted in the tree structure.



> System > Hardware structure > System object (HWSYS) > Edit > Insert

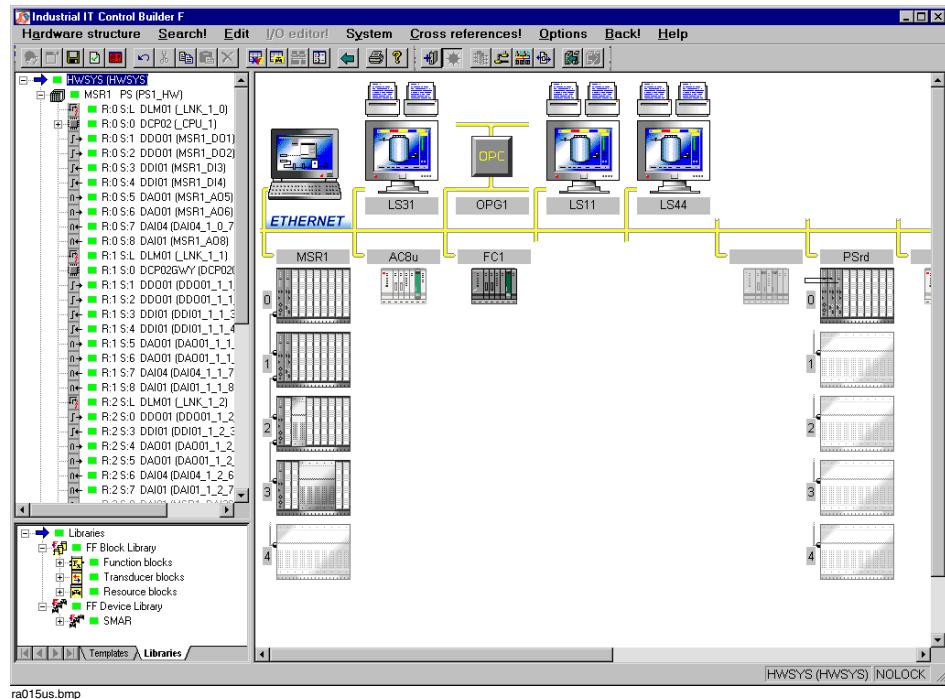

1.2 Operating System and EPROM Download


1.2.1 Boot EPROM Download

The Boot EPROM on the DCP02/PCP10 must have the same version number as the engineering software. The Boot EPROM can be updated either in the installation phase from Freelance Engineering, or at a later time from Freelance Engineering Settings.

The prerequisite is that there is an Ethernet connection to the process station.

Prior to loading the Boot EPROM to a CPU you should check that the network connection between the engineering PC and the process station works properly. For this purpose, a “ping” is entered in the command prompt window under Windows and then transmitted to the process station. A positive response from the CPU

(Reply from 172.16.1.5: bytes=32 time=10ms TTL=255) indicates that there is a network connection to the process station.

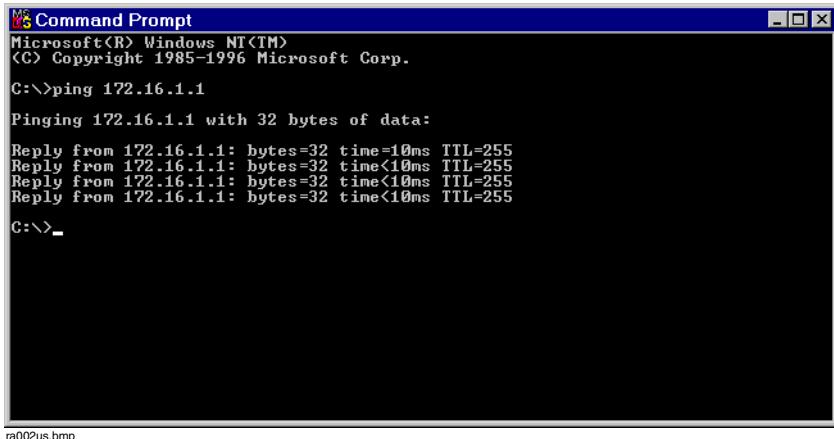

```

MS Command Prompt
Microsoft(R) Windows NT(TM)
(C) Copyright 1985-1996 Microsoft Corp.

C:\>ping 172.16.1.1

Pinging 172.16.1.1 with 32 bytes of data:
Reply from 172.16.1.1: bytes=32 time=10ms TTL=255
Reply from 172.16.1.1: bytes=32 time<10ms TTL=255
Reply from 172.16.1.1: bytes=32 time<10ms TTL=255
Reply from 172.16.1.1: bytes=32 time<10ms TTL=255


C:\>_

```

ra002us.bmp



> Start > Programs > Command prompt c:\> ping 172.16.1.5

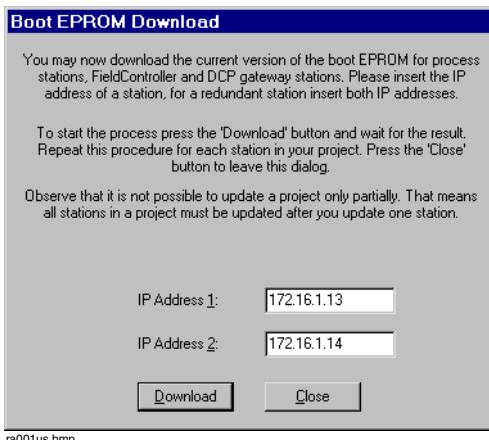

ra001us.bmp

Download

The current version of the Boot EPROM is downloaded to the process station with the given IP address(es).

Close

Terminates the EPROM update and completes the installation of the Freelance Engineering version or the download of the Boot EPROMs.

If you have more than one process station in your project, repeat the steps described above for each of them. If you are using a redundant process station, enter both addresses (IP addresses 1 and 2). The Boot EPROM will then be loaded for both of the CPUs.



Start > All Programs > ABB > Freelance <version> > Settings

1.2.2 Operating system download

The operating system is downloaded into the station via the system bus by actuating **Bootstrap**.

Prerequisites: Make sure that no operating system resides yet in the process station (RUN-STOP LED off). Otherwise, you have to **initialize all** prior to downloading the system.



The operating system bootstrap is normally executed automatically when the project is loaded for the first time by using the **Load whole station** option. However, it can also be performed upon a separate initialization action, independently of loading the user program. Downloading the operating system into the secondary CPU is not necessary, this is done automatically by the primary CPU.

1.3 Configuring the D-PS or D-PS/RED Resource in the Project Tree


In the project tree the individual software components of a project are shown in a clear overview. The individual elements or objects, usually referred to as the **project objects**, are implemented according to the IEC 61131-3 standard. Data processing of process data actually takes place in the **D-PS resources (process stations)**. Process operation and monitoring are realized in the **D-LS resources (operator stations)** or **D-GS resources (gateway stations)**. Data from other systems are integrated by the **OPC server** resource.

The resources in the project tree have to be assigned to the hardware objects in the hardware manager, in order to define which program is to be executed by which process, operator or gateway stations.

The process station resource (**D-PS**) stands for a Freelance process station, on which the **resource** and the tasks and programs assigned to it are processed.

The short name **D-PS** or **D-PS/RED** in the project tree indicates that no allocation to a physical station has been made yet in the hardware manager. After the assignment has been made, the allocated station type PS (or PSR for a redundant process station) is indicated.

The illustration below shows a redundant and a non-redundant PS in the tree.

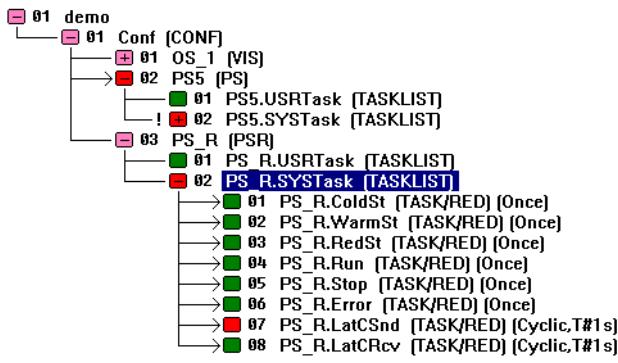

ra003us.bmp

1.3.1 Inserting a D-PS or D-PS/RED resource



Select the target position in the project tree

> **Insert above**

Inserts a new process station **above** the selected object.

> **Insert below**

Inserts a new process station **below** the selected object

> **Insert next level**

Inserts a new process station one level lower

The target position can be on the next lower level under the configuration element, or on the configuration level itself (with **Insert next level** only).



> Position cursor on target position, click with left mouse button > **OK**

1.3.2 Inserting a task or redundant task

In the process station, the actual programs are run in the tasks. The programs are processed either with program lists or with the sequential function charts.

A redundant task has so-called redundancy data. These are data of the process image and of the function blocks. The data sets are matched with each other after each cycle. This ensures that a redundancy toggle can take place at any point in time.

So that the data of a redundant task are redundancy-capable, all variables of a redundant task must be written in process image mode.

Not only the redundant task (TASK/RED), but also tasks of the previous type (TASK) can be configured under the redundant resources. Thus only those functions of the user program which also have actually to be redundant need to be configured redundantly within a redundant resource.

1.4 Processing and Error Handling

1.4.1 Automatic error handling at task level

Error handling at task level is described in the flow chart.

If an error is detected in a user program, the error task is executed once. The error task has the highest priority (priority 100) in a resource and is used for handling errors in user programs with user programs. If an unrecoverable error is detected, the error-producing task changes over to the unrunnable state. If the error is recoverable, the error-producing task can remain in the running state, provided that automatic error correction has been activated for the D-PS resource. Due to its high priority it cannot be interrupted by other tasks. However, the execution of the error task can be deactivated.

Error handling at task level is switched on by default, but can be deactivated in the resource configuration (see the *Engineering Manual System Configuration, Project tree*).

When deactivated an error causes the task to change to the unrunnable state, even if the error is recoverable. The error appears in text form in the task header, and the object number of the faulty project object is also displayed.


If automatic error handling is active and a recoverable error is detected, the affected task remains in the running state. In this case, the error condition is ascertainable only by evaluation of the system variables.

Each runtime error detected during execution of a command results in an entry recording the cause and location of the error in system variables specially defined for error handling. The cause of the error, e.g. 4 for UNIT Div by 0, is saved in the variable "ErrorNo". The variable "ErrorProgra" is written with the object number of the program or function block that caused the error. Furthermore, the object number of the affected task is saved in the variable "ErrorTask", but only displayed in the task header if error handling is deactivated. The affected object can then be localized in the object list with its name, state, type and position in the project tree. If the affected task, the one which triggered the error, is not the error-handling task, the error handling task itself is now triggered. Error handling specific to the cause of the error and/or its location can be undertaken in this task, with the aid of the system variables.

If an error should occur in the error-handling task itself, the error-handling task is signaled as unrunnable.

See also ***Engineering Manual IEC 61131-3 Programming, Variables, System Variables***.

1.4.2 Task error characteristics

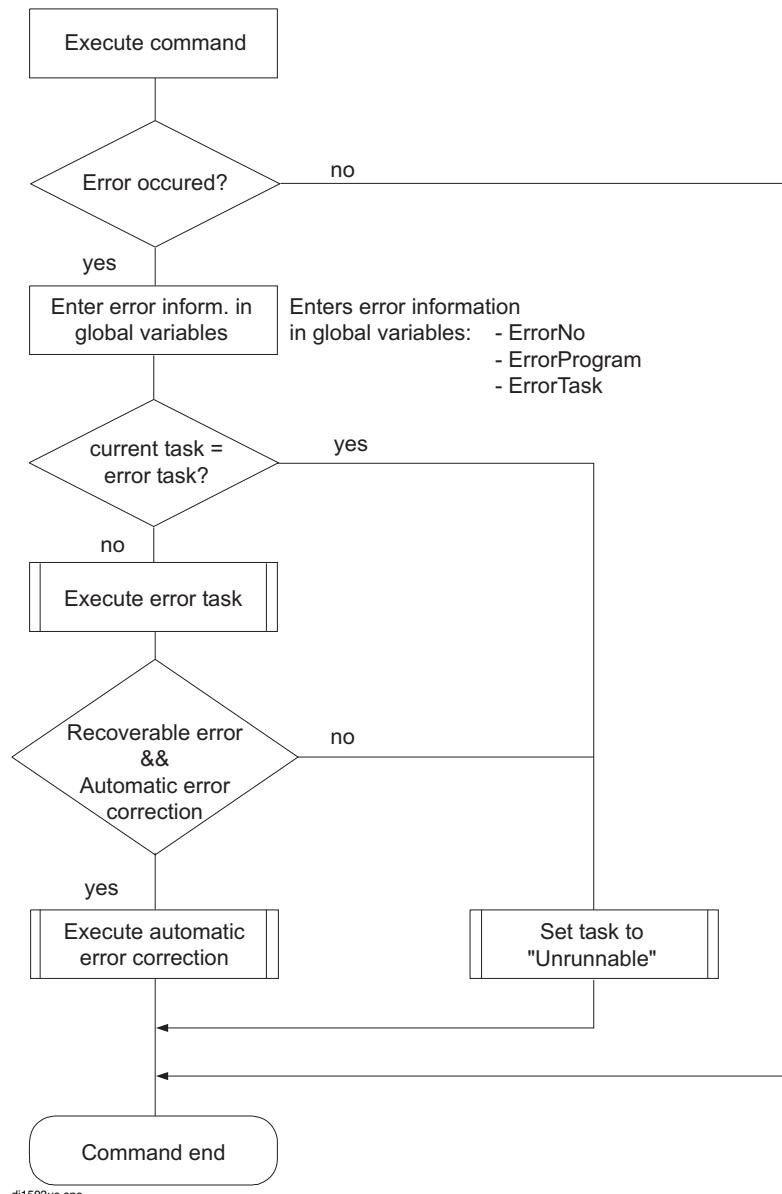

di1503us.eps

1.4.3 Startup and shutdown performance of the modules

A signal for connection monitoring is permanently exchanged between I/O modules and the CPU module of the process station. If this signal does not appear for more than 250 ms (for 500 kbit/s) and/or 1.25 s (for 100 kbit/s) both sides detect the interruption of the connection. The CPU module sends a system message to the operator station and the output modules adopt the safety values. Dependent on the requests of the process the safety values can be configured as "Hold the last value" or to a particular value/state.

A cold process station start always leads to output of the safety values.

For "Load whole station" and at resource Initialization/Overall reset, the output levels of the output modules go to zero current.

1.4.4 Power fail signal (PF) and no power fail

PF < 15 ms While PF signal is active, the CPU module of the process station does not communicate actual values; I/O modules maintain the last values.

PF > 15 ms I/O modules maintain the last values until they have recognized the interrupted connection with the CPU module; they then adopt the configured safety values. Safety values are maintained until the CPU module has executed a warm start and sends new values to the I/O modules.

1.4.5 Power fail signal (PF) and power fail

I/O modules maintain the last values until they have recognized the connection interruption and then adopt safety values until the CPU module sends actual values after restart. In the case of power fail of the I/O module, output levels adopt zero voltage and/or zero current.

After voltage return I/O modules only change their output level when the CPU module communicates actual values. Analog output modules are an exception. They hold the last values as long as external voltage supply does not fail. Outputs are only deenergized when the CPU module is powered again.

1.5 Configuring the Process Station in the Hardware Structure

Within the hardware structure the resources defined in the project tree are allocated to the hardware actually required. The D-PS resource stands for a process station in the hardware structure.

The rack-based process station consists of a basic unit (main rack) and the extension units (extension racks). Each rack accommodates various modules. A CPU module is required for every process station, and a link module DLM is needed for every rack. The modules must be plugged in special slots.

The I/O modules can be arranged in all racks as required. They can be plugged in any slots, except for those reserved for the DCP and DLM modules.


The allocation to the physical stations is made in the hardware manager. You can select here the process stations (PS) for rack-based systems and FieldControllers for connection of fieldbus modules. A distinction is made between redundant and non-redundant process stations. Already when inserting a resource you can thus define whether or not the tasks and programs assigned to it are to be processed in redundant or non-redundant mode.

A redundant process station of type D-PS/RED consists of two DCP10s linked via a redundancy link. In the project tree, they appear as one process station resource.

When loading the process station, one of the two process stations becomes a primary and one the secondary station. Note that only the primary stations is shown in the project tree.

1.5.1 Inserting process stations

Process stations can be inserted in the system in either the tree view or system view. After **Insert** the object will appear in both the tree view and the system view. The object is shown in the respective station position, in graphical form. Double-click on the gray field in the header of the inserted process station to make the assignment of the resource.

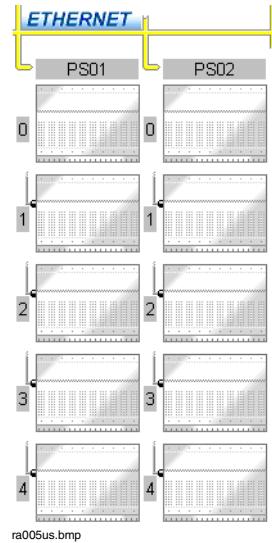

- > Select system object (HWSYS) in the tree view > **Edit > Insert**
- > Select station type > Select position

Alternatively:

- > Select station position in system view > Double-click

1.5.2 Allocating a resource

When a station is allocated, it is automatically activated or a search operation is carried out in the Freelance Engineering “Commissioning” mode to find the station on the system bus.

In this way, the parts of the user program configured in the project tree are allocated to the stations.



- > Left mouse click on the gray text field of the station
- > **Edit > Resource allocation**
- > Select the corresponding resource from the list

Alternatively:

- > Double-click on the gray text field of the station
- > Select the corresponding resource from the list

1.5.3 Inserting modules

Modules can be inserted in the process station in either the tree view or the station view. After **Insert**, the object appears in both the tree view and the station view. The object is shown in the corresponding slot. In the station view, the modules can be equipped by double-clicking.



> Select process station in the tree view > **Edit** > **Insert**

> Select module type > Select a free slot


Alternatively:

> Select slot (L, 0 - 8) in the station view > Double click

The following modules are available:

DAI01	Analog input module 16 x 0/4...20mA, $R_i=50$ Ohm
DAI02	Analog input module 16 x 0...10V DC
DAI03	Analog input module 16 x 0/4...20mA, $R_i=250$ Ohm
DAI04	Analog input module 8 x Pt100 / me
DAI05	Analog input module 16 x 0/4...20mA, MU supply
DAO01	Analog output module 16 x 0/4...20mA, $R_L \leq 400$ Ohm
DCO01	Communication module 4 x RS 485/RS 422 or RS 232
DCP02	CPU module
DCP02GWY	DCP gateway DCP for the Maestro UX gateway
DCP10	CPU module (capable of redundant operation)
DCP10GWY	DCP gateway DCP for the Maestro UX gateway
DDI01	Digital input module 32 x 24V DC
DDI02	Digital input module 16 x 24...60V AC/DC
DDI03	Digital input module 16 x 90...230V AC
DDI04	Digital input module 28 x 24 V DC NAMUR initiators
DDI05	Digital input module 32 x 115/230 V AC
DDO01	Digital output module 32 x 24 V DC, 0.5 A
DDO02	Digital output module 16 x 24...230 V AC/DC
DDO03	Digital output module 16 x 24...60 V AC/DC, read back
DDO04	Digital output module 16 x 115...230 V AC, read back
DFI01	Frequency input module 4 x $f \leq 45$ kHz
DLM01	Link module for power supply
DLM02	Link module with redundant power supply

When an object is inserted, a default name is assigned to it which basically represents the mounting position. When the object is copied, the object name is adapted to the new position. When the object is moved, the name remains unchanged.

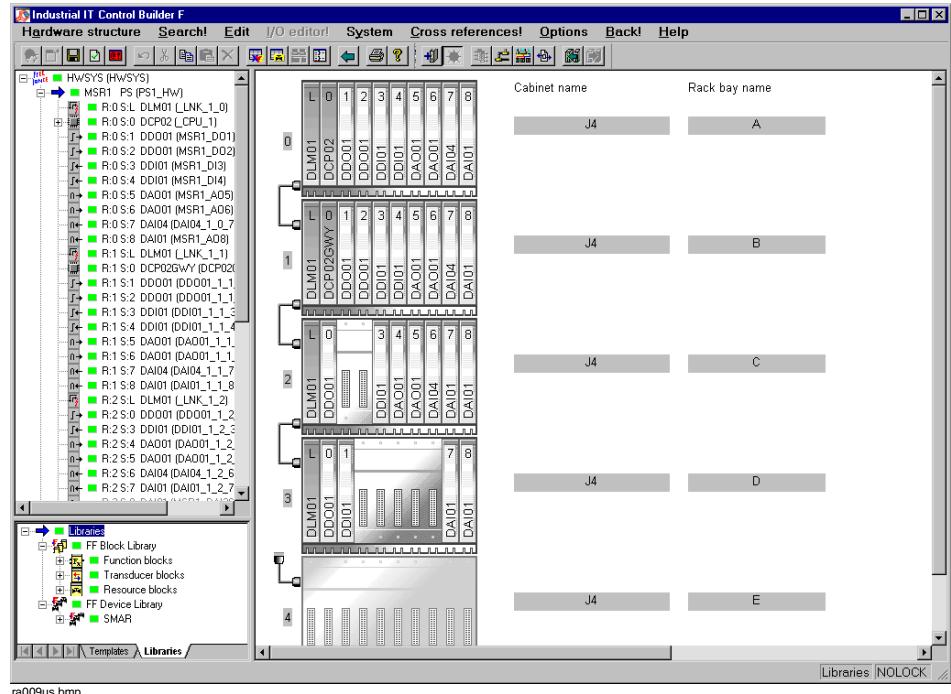

Example: DCP10 in the first extension rack

R:1 S:0 DCP10 (DCP10_2_1_0)

R: Rack

S: Slot


DCP10 Default name of the module

DCP10_2_1_0 Default name with resource 2,rack 1, slot 0


1.5.4 Redundant process station

A redundant process station always consists of two DCP10 module mounted in a resource. Both DCP10 modules can be integrated in the station view of the

redundant process station by double-clicking with the mouse. Note that these modules can be mounted in slot 0 or 1 of the basic unit, only.

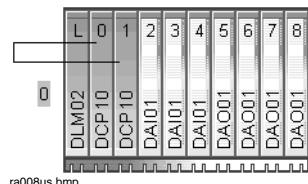

It is also possible to mount one redundant DCP10 module in the basic unit, and the second one in the extension rack.

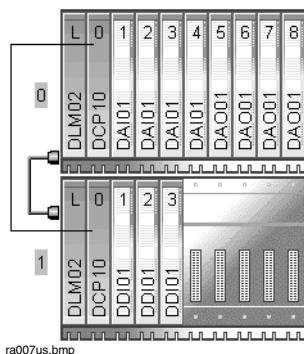

1.5.5 Defining parameters of the process station

The station must be allocated to a resource (D-PS) to define which part of the user program is to be run on which process station.

You can access the PS parameters by selecting the PS in the tree view or graphics view.




Select PS in the tree view > Click with right mouse button > **Parameters**

Select PS in the tree view > **Edit** > **Parameter Setting**

The boot parameters and the rack data can be defined.

Boot parameters

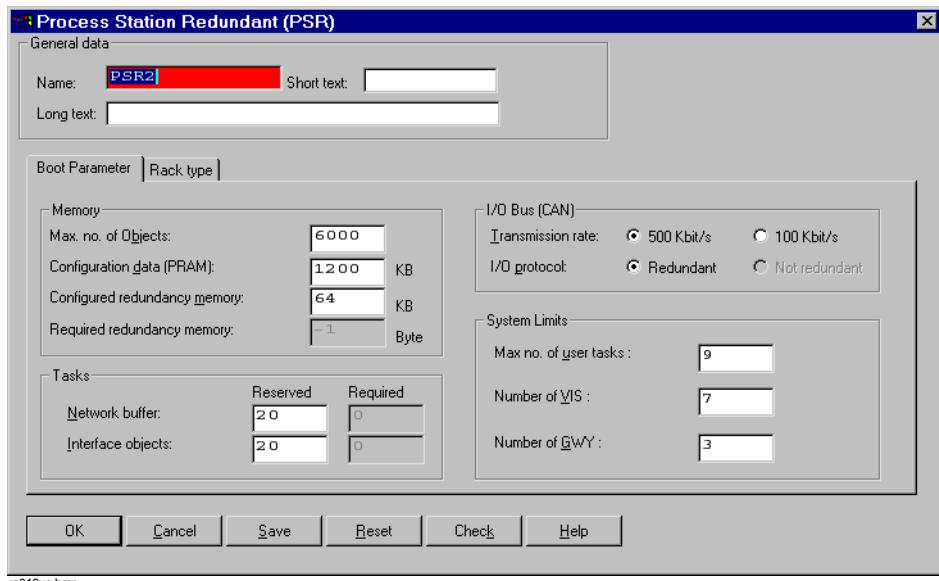

ra013us.bmp



All the parameterizable boot parameters of a resource cause a project version error if a change is made. You must initialize the resource to enable a change to be made to the boot parameter.

Memory

These parameters have an effect on the allocation of memory within the resource. When there are an extremely large number of objects in the process station, errors may occur on loading the objects; these settings may be altered to try to make the project loadable.



Attention should also be paid to the system variables PRAM_Free and RAM_Free after loading. If the variable PRAM_Free has a value of 0, then the value of PRAM_Size must be increased; if the variable RAM_Free is set to 0, then both PRAM_Size and the maximum number of objects must be reduced.


The memory for the Freelance CPU modules (DCP 02, DCP 10) is limited to 8 Mbytes. The memory can be subdivided as listed below:

The memory for the operating system is separated into two parts:
Memory for operating system

- + Memory for the object directory
- + Memory for PRAM
- + Redundancy memory
- + Memory for RAM

Total memory = 8 Mbytes

One part of fixed size and another one which size depends on the number of communication connections. The memory for the objects, memory for PRAM and, if available, memory for redundancy can be adjusted in the boot parameters of the resource. Any surplus memory is made available in RAM. There is no absolute limit for the memory ranges that can be set. Any time that a limit is reached, it can be changed. This results in a reduction of free RAM.

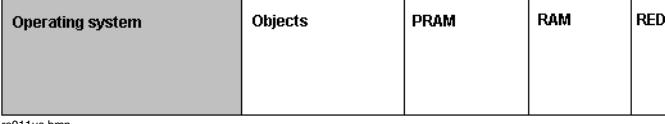

ra011us.bmp

Operating system	Objects	PRAM	RAM	RED

To ascertain a suitable value for PRAM, current values can be read in commissioning mode. These values are shown in the following **system variables**:

PS.PRAM_SIZE	The PRAM size set in the boot parameters
PS.PRAM_FREE	The proportion of free PRAM
PS.RAM_SIZE	The amount of RAM in use
PS.RAM_FREE	The proportion of free RAM

Max. no. of objects

The maximum number of objects that can be configured on the resource.

Configuration data (PRAM)

Memory size in Kbytes that is reserved for the configuration data. This memory area is cold-start resistant.

Configured redundancy memory

Memory size in Kbytes that is reserved for the transfer of redundancy data.

Max. redundancy memory required

Maximum size of memory required by the project for transfer of redundancy data.



The redundancy memory is only shown in redundant and plausible process stations.

Tasks

Information about the tasks that are run in the background. Every communication link occupies internal system resources like additional memory or system objects.

Network buffer Area of memory in Kbytes that is reserved for the communication links.

Interface objects

Maximum number of objects that can be reserved for interfaces.

I/O-Bus (CAN)**Transmission rate**

Select a transmission rate of 100 or 500 Kbit/s of the station bus DigiNet P (default 500 Kbit/s). The transmission rate is closely linked to the max. distance between two stations of one process station.

Transmission rate	Distance to last I/O unit
500 Kbit/s	80m
100 Kbit/s	400m

Also refer to the **Mounting and Installation Instructions, Setting**

Link Module, and to the *Engineering Manual System Configuration, Hardware structure.*



If an I/O module with a version-2-compatible EPROM version (not suitable for redundant operation) is plugged into a later version of process station, and if the DigiNet-P station bus transmission rate (rack ID) that is set on the link module does not match the transmission rate configured for the resource, this will lead to a communication error in the I/O modules! This can lead to the modules' outputs dropping out!

I/O modules later than version 2 no longer check the setting of the coding switch on the link module. In the interest of safety, the coding switches on the link modules should be set to match the configured transmission rates. See also manual Mounting and Installation Instructions, Adjusting the link module.

I/O protocol Select the I/O protocol

Redundancy Default, - I/O EPROM's capable of redundant operation must be plugged on all I/O modules.

Not redundant Under this protocol redundancy is not supported. Designed for operation with a mixture of not redundant I/O modules (until version 2), if redundancy is not required. This mode can only be selected in non-redundant resources.

Max. no. of User tasks

Max. number of tasks to be configured for this resource.

No. of VIS links

Number of permissible communication links to the operator stations (Freelance Operations).


See also ***Engineering Manual System Configuration, Project Tree, Configuring the communication links.***

No. of GWY links

Number of permissible communication links between the resource and the gateway stations (e.g. DDE, OPC).

See also ***Engineering Manual System Configuration, Project Tree, Configuring the communication links.***

Rack

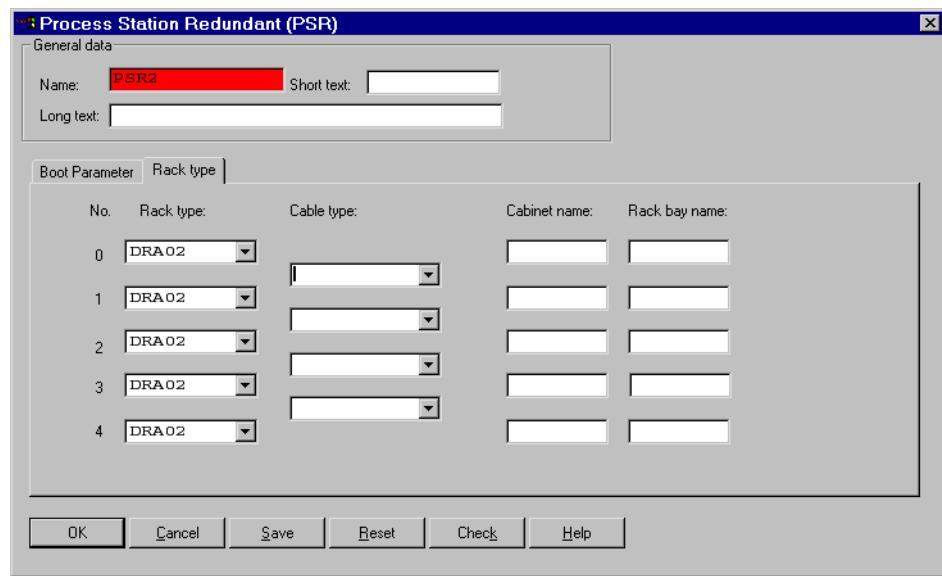

I/O Racks

Rack type

Rack selection

DRA 01 (delivery until end of 1997)

DRA 02 with 10 module slots

DRA 03 with 3 module slots

DRA 04 with 5 module slots

Cable type

CAN cable for station bus DigiNet P

Location name

Cabinet name freely selectable

Rack bay name freely selectable

For cable length see ***Mounting and Installation Instructions, Mounting the modules.***



Use the standard setting if the total distance between central unit and I/O units is less than 80 m. With this setting the process station bus operates with normal data rate, i.e. 500 kbit/s, in V1 and V2 systems.


For distances between central unit and I/O units of more than 80 m the long distance setting has to be used. With this setting, the process station bus operates with a reduced data rate of 100 kbit/s. Thus, data transmission to the I/O modules is five times slower. In this case, the distance between central unit and I/O units is limited to max. 400 m.

With version 3 or higher the transmission rate of the DigiNet P is set using the Freelance Engineering configuration software. See also [Boot parameters](#) on page 26.

For racks DRA 03 and DRA 04, the number of module slots is reduced. Otherwise the behavior is equivalent to rack DRA 02

1.5.6 Defining module parameters

The module parameters can be called up for display via the parameter setting masks. The current values can also be read in the commissioning mode.

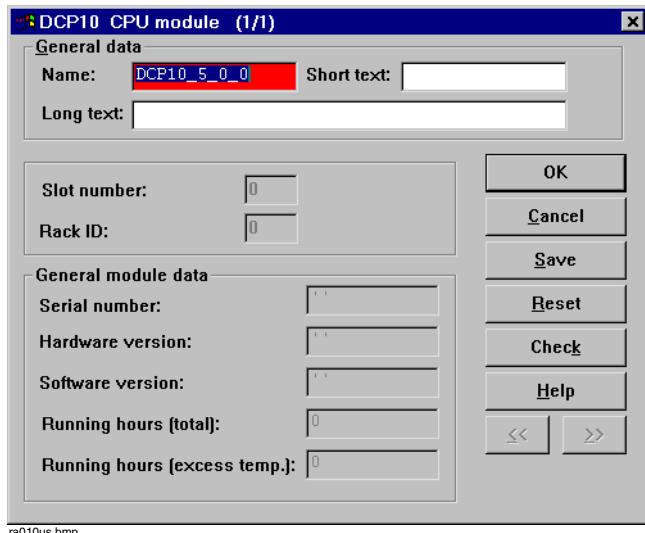

- > Select module in tree view > Click with right mouse button > **Parameters**
- > Select module in tree view > Double-click on module in graphic view

Example: CPU module DCP10

Serial number Indicates the sequential serial number from manufacturing.

Hardware version

Indicates the hardware version.

Software version

Indicates the version of the operating system

Running hours (total)

Indicates the total number of running hours.

Running hours (excess temp.)

Indicates the number of running hours at excess temp.
(Excess temperature in the module: more than 70 °C).



These current values are only available in the commissioning mode.

Link modules DLM 01/02

Link module with power supply input of the process station and external battery connector. One link module must be mounted in each central unit and in each I/O unit. Link modules must be plugged in slot L (first slot on the left hand side of the rack).

Two link module models are available: the standard link module DLM 01 with single power supply, and link module DLM 02 with a redundant power supply meeting high power reliability requirements.

Object data: Link module DLM 01

Name	Data type	Comment
Diagnostic data		
BTL	BOOL	Battery low
ERR	BOOL	Module defective
STA	UDINT	Bit-coded error status

Object data: Link module DLM 02

Name	Data type	Comment
Diagnostic data		
TMP	BOOL	Excess temperature of the I/O module
PF1	BOOL	Power-fail channel 1
PF2	BOOL	Power-fail channel 2
BTL	BOOL	Battery low
ERR	BOOL	Module defective
STA	UDINT	Bit-coded error status



The BTL signal is only set if a CPU module is present in this rack.

CPU modules DCP 02/10**Object data: CPU module DCP02**

Name	Data type	Comment
Parameter setting mask		
RSState	INT	Position of the run/stop switch. 0 - Run, 1 - Stop
Diagnostic data		
TMP	BOOL	Excess temperature
BTL	BOOL	Battery low
ERR	BOOL	Module defective
STA	UDINT	Bit-coded error status

Object data: CPU module DCP10

Name	Data type	Comment
Parameter definition mask		
RSState	INT	Position of the run/stop switch. 0 - Run, 1 - Stop
RedState	INT	Redundancy state. 0 - Primary, 1 - Secondary
Diagnostic data		
TMP	BOOL	Excess temperature
BTL	BOOL	Battery low
PNE	BOOL	Physical network down
ERR	BOOL	Module defective
STA	UDINT	Bit-coded error status

1.6 Commissioning the Process Station

A redundant resource is loaded like a non-redundant resource in commissioning.


The process station can be loaded with the selection of the resource. One of the two CPU modules automatically becomes Primary CPU and the other Secondary. It is not possible to influence which of the two CPU modules becomes Primary.

All I/O modules retain their previous value in a redundancy toggle.



A redundancy toggle can also be activated with the system function “Force redundancy toggle (PRIM/SEC)“.

1.6.1 Resource in the project tree

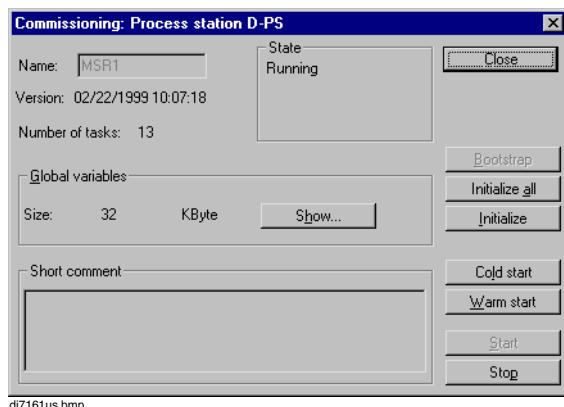

Resource states

A resource can assume various states that are displayed in the project tree behind the objects and in the dialog mask of the resource. The display of resource states is divided into three parts:

- Running, stopped, error state
- Substates, such as warm start stopped or running partially
- Redundant resource state, such as no Secondary

No connection

The system bus connection has been interrupted, or **initialize all** is currently being executed, or no connection is possible, e.g. because

of an invalid network address or an incorrect Freelance Operations station number.



Any interruption in the DigiNet S system bus connection will be signaled after approx. 15 seconds.

No operating system

Seen when system is first switched on, or after **initialize all** of resource.

Stopping

Resource in transition from **Running** to **stopped**.



This state is only displayed if task processing takes a relatively long time.

Stopped [HW]

Resource has been **Stopped** by utilizing the RUN/STOP switch on the CPU module.

Stopped [SW]

Resource > **Stop** was selected in commissioning.



If the resource is **stopped** while a task is at a **break point**, then this task switches to an **unrunnable** state. The error task is not initiated.

Cold start stopped

The command to cold start the resource had been initiated by the person responsible for commissioning, or from the system function "Force cold start". Indicates self-test of CPU module was OK, but, the RUN/STOP switch on the CPU module was in the STOP position or the resource was stopped by the person responsible for commissioning before achieving running state.



The cold start task, Name.ColdSt (where Name = resource name) is executed only when the resource is started (STOP to RUN). When cold starting, all the resource data is initialized. The operating system is not affected and the output module channels assume their safety values.

Warm start stopped

The command to warm start the resource was initiated by the person responsible for commissioning or a power failure (power-fail signal from the power supply unit), the RUN/STOP switch on the CPU module was set to STOP or the resource was stopped before achieving **running** state by the person responsible for commissioning.



The warm start task, Name.WarmSt (where Name = resource name) is executed only when the resource is started (STOP to RUN). When warm starting, all data and variable values of the resource are unaffected and the output module channels assume their safety values.

Starting

Resource in transition from **stopped** to **running**



This state is only displayed if task processing takes a relatively long time.

Running

Resource started and RUN/STOP switch in RUN position

Running partially

Not all resource program objects are processing, e.g. task in stop or program list OFF

Version error, running

There are user program version disparities between the active station and the assigned resource. Such disparities are displayed independently of the run state of the resource, and are therefore also displayed when stopped.

[del2]

Resource objects have been deleted, in this case, two objects

Wrong station number

The station number in the process station (CPU module) does not match the station number in the hardware structure (network).

Incompatible EPROM version

The EPROM version of the CPU module does not match that of Freelance Engineering.



The boot EPROM must be updated. See Manual **Getting Started**.

Additional states of a redundant resource

Not redundant

The operating system is loaded but the user program has not yet been completely loaded.

No secondary

Operating system and user program are completely loaded. Secondary CPU module has not yet been announced to the Primary CPU module.

Not sync

Secondary CPU module is present, operating system and user program are loaded but processes are not yet updated and synchronization is thus not yet concluded.

Sync

Normal state of a redundant process station. Secondary CPU module is synchronized and ready for redundancy switching. Cyclic data mirroring between the CPU modules continues during program processing.

Redundancy error

Redundancy is not possible.




CPU module can not achieve Sync state. It has tried to reach “sync” state repeatedly with resource stop and start operations. Possible reason may be unsuccessful loading of user program.

System workload is too heavy; the redundant connection can not be maintained. Task cycle times that have been configured are too low.

Resource state diagram



State diagrams of the redundant CPU modules are see [Redundancy statuses](#) on page 57.

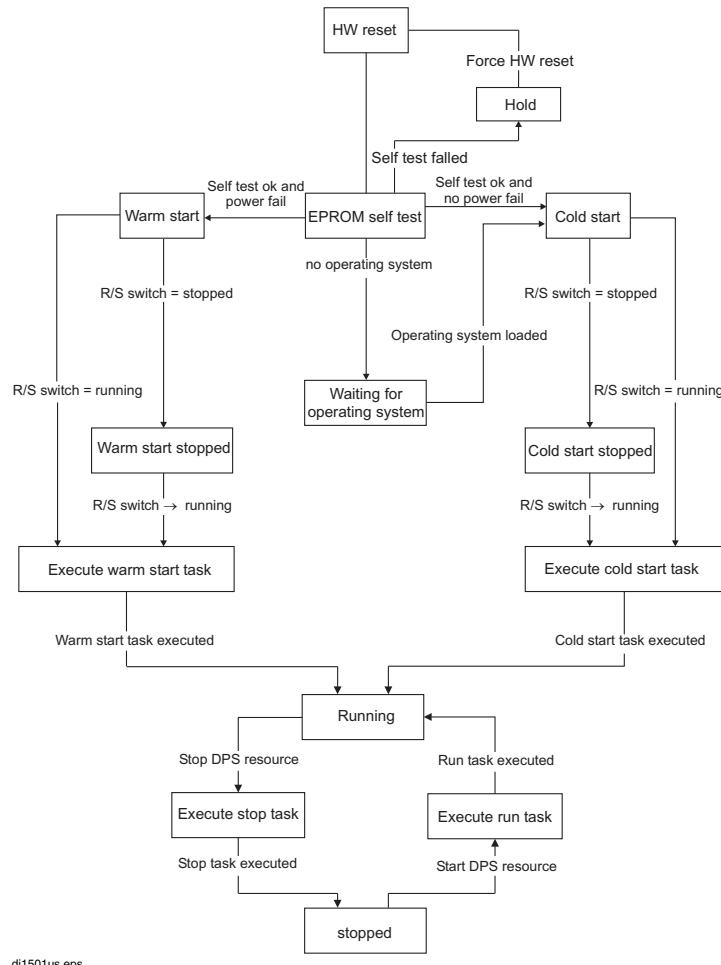

Resource processing

Prim/Sec


A redundancy toggle is initiated (toggle between Primary and Secondary CPU). A toggle is possible only in the SYNC status

Bootstrap	The Primary CPU is loaded with the operating system and is initialized.
Initialize all	Both CPU modules are initialized. The Primary CPU again becomes first active and can then be bootstrapped. After Initialize all the redundancy is no longer active.
Initialize	In the initialization, the process station performs a cold start. Any user program already present is also deleted. The redundancy is now no longer active. The Secondary CPU moves to the "no OS" status.
Cold start	Both CPU modules perform a cold start.
Warm start	Both CPU modules perform a warm start. The CPU module previously active again becomes Primary CPU.
 Run/Stop	The number of warm starts is counted in a system variable (xxxx.NoPowerFail), which is reset to zero in the event of a cold start. The time of the last power fail signal can be read in a further system variable (xxxx.PowerOffTim).
Run/Stop	Both CPU modules perform the command (Run or Stop). The LED at the Primary CPU indicates the current status. After a redundancy toggle, the last status is retained, irrespective of the RUN/STOP switch position.

1.6.2 Task



Select project object task > **Project > Header**

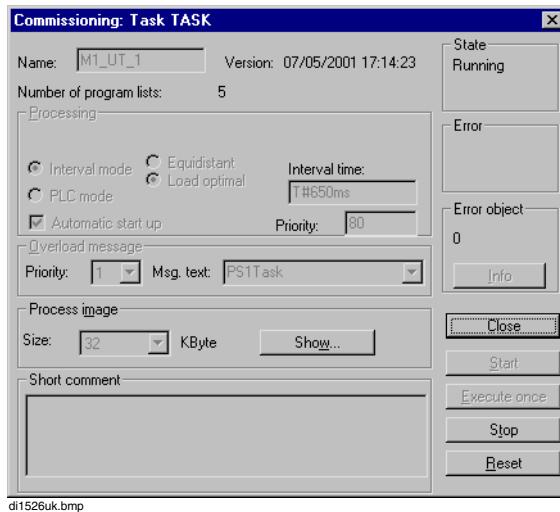

If configured for **autostart**, the task starts automatically when the resource is started. All lower-level program lists and programs start along with the task as long as the program list parameter has been set **ON**.



For a description of the configured data, see also *Engineering Manual, System Configuration, Project Tree, Task TASK and redundant task TASK/RED*.

Task state displays

Ready

Task already loaded and manual start possible.



If no **autostart** has been configured for a task, it reverts to the **ready** state after each cold start and has to be restarted.

Non-existent

Task is loaded but cannot be started. A software version error exists.

Not loaded

A change to a task, or to a program within the task, which has a side effect on the task, has not yet been loaded.

Unrunnable

During execution of the task either an unrecoverable error occurred or a recoverable error occurred while automatic error correction was switched off.



Automatic error correction for a task is switched on in the default setting. If automatic error correction is switched off, the task changes to the unrunnable state on any error, even if the error is recoverable. The error appears in text form in the task header and the object number of the faulty project object is also displayed.

An exception is constituted by tasks which, although loadable, have no lower-level user program. Such a task is thus unable to initiate execution of a program, and if started nevertheless, it goes into the unrunnable state.

Running

After manual **start** of the task or when the task has been set up with **Autostart**.



When a higher-level resource is stopped and re-started, the lower-level task reverts to its old state. A task with Autostart changes automatically to running. A task's state may also be changed when the resource is stopped, and the changed state will be reassumed when the resource is restarted.

Stopped

After execution of Stop task, Stop station (HW) or Stop higher-level resource (SW).



If a stopped task is reset to the ready state (not visible) with Reset, no change to its state of stopped is displayed to the user. When Stop is changed to Start, the RUN task is executed.



A task starts automatically if the switch on CPU module is switched to RUN and previous state of the task was Running.

braked

When the debugger is running, the task is at a breakpoint. This state can be quit using Single-step or Go in the program with the break point.



If the resource is **stopped** while a task is **at break point**, then this task switches to an **unrunnable** state. The error task is not initiated.

Task error messages

Error #	Error text	Description
1	INT/DINT overflow	Signed integer or time operation caused overflow.
2	INT/DINT underflow	Signed integer or time operation caused underflow.
3	INT/DINT div by 0	Signed integer division by zero.
4	UINT/DINT div by 0	Unsigned integer division by zero
5	INT/DINT save overflow	Signed 16-bit-integer operation caused overflow on storage.
6	REAL overflow	Real operation caused overflow.
7	REAL underflow	Real operation caused underflow.
8	REAL div by 0	Real division by zero.
9	REAL invalid value	Real operation with undefined value
10	DT overflow	Operation with DT and TIME caused overflow.
11	DT underflow	Operation with DT and TIME or with DT and DT caused underflow
12	UINT/UDINT overflow	Unsigned integer operation caused overflow.

Error #	Error text	Description
13	UINT/UDINT underflow	Unsigned integer operation caused underflow.
128	Program exec. error	Unloaded object (e.g. program, FB, etc.) to be executed.
129	FB error integer	A function block from the function block library has triggered an integer overflow or underflow, the error can only be detected following execution of the block and, thus, no recovery is possible.
130	FB error real	Function block from function block library triggered REAL overflow or underflow, error can only be detected after execution of the block and, thus, no recovery is possible.
131	Process image read error	Unrecoverable error occurred on reading process image.
132	Process image write error	Unrecoverable error occurred on writing process image
133	Execution abort	If the resource is stopped in a program in which an endless loop is running, the task concerned switches to an unrunnable state. Execution of the task is terminated in the endless loop and the program not computed to the end.
134	Invalid Cmd in Break	If the resource is stopped while a task is at break point, then this task switches to an unrunnable state. The error task is not initiated.
135	Illegal array index	The computed index for a array access is outside the defined array boundaries.


Task error object

If an error occurs in processing the task, the number of the object that caused the error is displayed. The path to the object giving rise to the error can be displayed via **Info**.

Task state diagram



Unrecoverable errors are errors in configuration, for example division by zero. In this case the task, and in particular the program, should be checked.

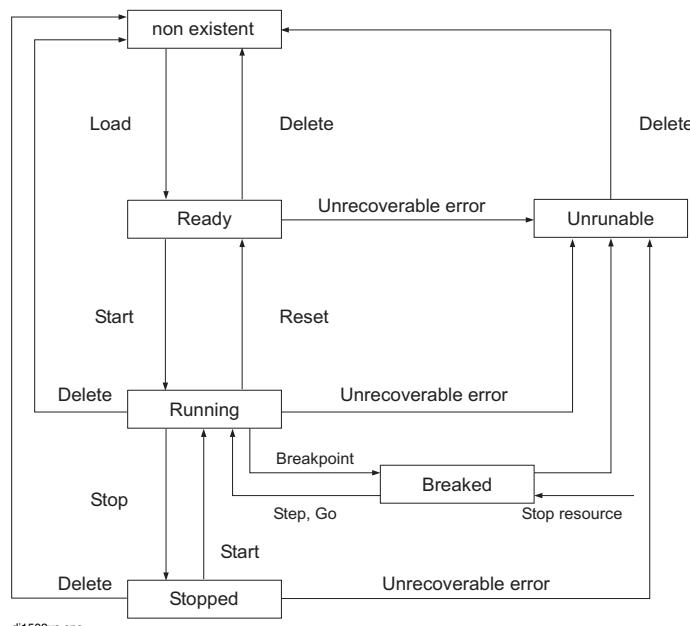

Task processing

Start The selected task is started. It is processed either in the cycle or as soon as possible (SPS mode), depending on configuration.

Execute once The selected task is executed precisely once. Task subsequently reverts to the stopped state.

Stop The selected task is stopped.



Task can also be stopped by using the RUN/STOP switch on the CPU module.

Reset Current task reverts to the configured state.

Close OK exits the dialog box and returns to project tree.

Show... Selected task's process image is displayed. Process image size can be configured. Process image is displayed automatically when the operating system is loaded.

Process image display



Select project object task > **Project > Header > Show...**

Task process image list for node M1_UT_1					
Variable n...	Type	State	Access	Offset	
Alarm1	BOOL	CLEAN	READ/WRI...	15	
Weg	WORD	CLEAN	WRITE	98	
ANAUAEalar...	REAL	CLEAN	READ/WRI...	88	
MSR1_Horn...	BOOL	CLEAN	WRITE	96	
MSR1_BPS...	TIME	CLEAN	WRITE	92	
udintDIDO_...	UDINT	CLEAN	READ/WRI...	72	
TEST_AI7_15	UINT	CLEAN	READ	32748	
TEST_AI7_12	UINT	CLEAN	READ	32750	
TEST_AI7_8	UINT	CLEAN	READ	32752	
TEST_AI7_4	UINT	CLEAN	READ	32754	
MSR1_A05....	UINT	CLEAN	WRITE	6	
MSR1_A05....	UINT	CLEAN	WRITE	4	
MSR1_A05....	UINT	CLEAN	WRITE	2	
MSR1_A05....	UINT	CLEAN	WRITE	0	
Max. memory size:		32768	Byte		
Available memory:		32641	Byte		
Largest memory block available:		32640	Byte		

di1529uk.bmp

Variable name

Variable name, max. 16 characters

Type

Data type, e.g. REAL, BOOL, UINT etc.

State

Object is correct and loaded.

CLEAN

DIRTY

Object version in engineering station does not match that in the station.

CREATE

Object not yet loaded into station.


<i>Access</i>	DELETE	Object deleted in project database, but still present in station.
	READ	Read-only
	WRITE	Write-only

See also *Engineering Manual, System Configuration*.

1.6.3 Program list (PL)



Select project object program list > **Project** > **Header**

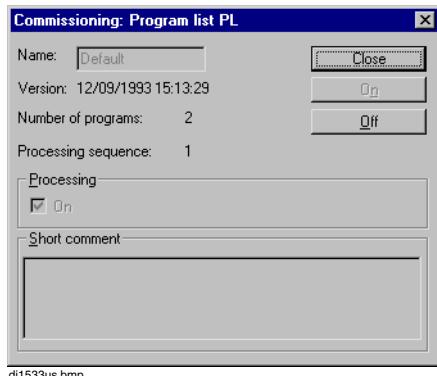

Program list state displays

Versions error

Program list was loaded but the versions do not match

not loaded

Program list is not yet loaded

On

Program list is switched on

Off

Program list is switched off

Program list is switched off

Processing of the program list

OK	OK exits the dialog box and returns to the project tree.
On	Processing of program list is switched on.
Off	Processing of program list is switched off.

1.6.4 State displays in the project tree

In contrast to configuration, state information is maintained on project objects during commissioning. This state information appears after each project object in brackets (like the object types) and is updated as it changes. The state information reflects the state of this object in the process station. If arrows should appear before the nodes, these project objects must first be loaded or reloaded into the station because of a configuration change. An exclamation point indicates that other objects at levels below the one so marked need to be updated because of changes in their configuration.

The color of the node in the display provides information about the effects of its configuration change on other objects. Higher-level information may also need to be updated in the station.


In commissioning, **nodes** are displayed in the same formats as in configuration. See *Engineering Manual, System Configuration*. All states except **Running** are displayed in red.

1.6.5 Status displays in the hardware structure

After loading the resource in the station, the system or station knows which modules or field devices are configured in the station. The components (modules, devices) themselves may not have been installed yet, or the position of the installed component may not match the positions (slots) configured., Such errors are signaled by colored state information.



System > Hardware structure

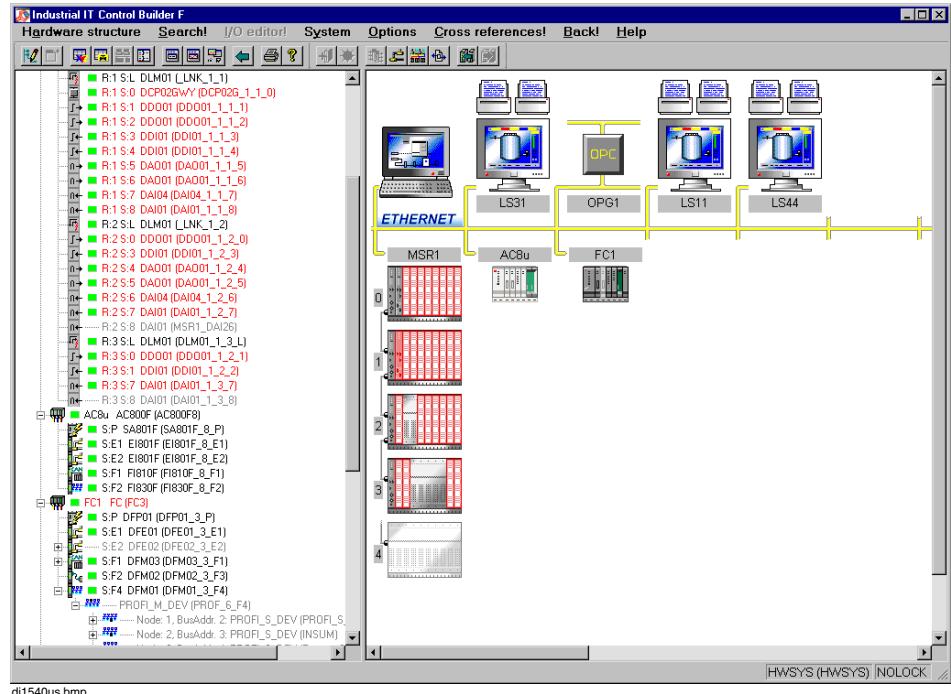


State in the tree view

In the tree view, state information is shown thus: active (black), faulty (red) and inactive (gray). The color coding is applied to the object information (text) rather than the icon.

Module state in the system and station views

The modules in the rack or the FieldController modules are displayed in various different colors according to their current state.

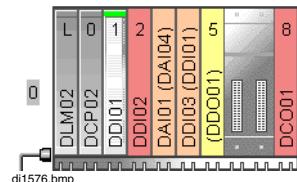

Color and state

transparent (Rear view)

There is no module configured in this slot, neither is any module installed in the station.

gray	The module is configured and the correct module type installed.
red	A module is configured in this slot, but not present in the station.
yellow	A module (e.g. type DDO01) has been detected as installed in this slot, but no configuration is available.
orange	The module type configured in the hardware structure (e.g. DAI01) does not match the installed module type (e.g. DAI04).

Force state

green	A green rectangle is displayed towards the top of the module (only for I/O modules). At least one channel on the module has been forced.
-------	--

State of the racks


When they are added to the hardware structure, for a process station the max. number of racks is shown. The rack indicates whether the unit is active, inactive or faulty. Where a fault is indicated, this is generally due to the unit not being detected at all, i.e. not being installed or being impossible to address over the system bus.

dark gray	The rack is activated.
light gray	The rack is not activated
red	The rack cannot be addressed

State of the modules

The **detail view** provides some detailed information about the I/O modules of the process station, thus enabling the user to easily identify the modules.

The state of modules is indicated by a colored triangle.

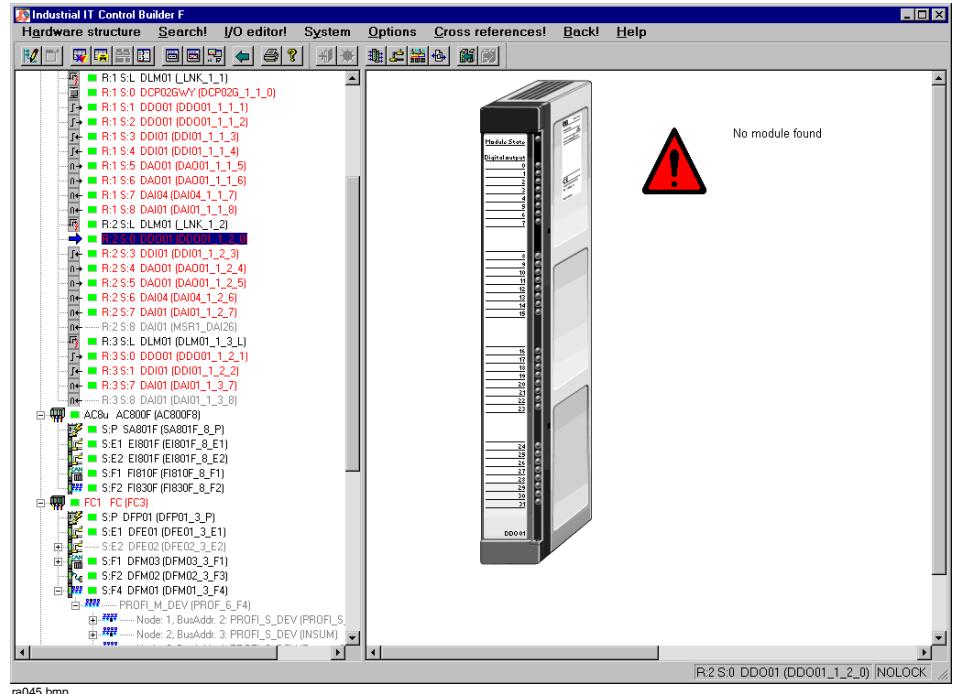

No module found (red warning sign)

A module is configured in this slot, but not present in the station.



ra043us.bmp

Wrong module type (orange warning sign)

The module type configured in the hardware structure does not match the installed module type (e.g. DAI 04).



ra042us.bmp

Wrong module type
Configured: DAI01
Mounted: DAI04

Forced channels (green warning sign)

At least one channel of the module has been forced. See *Engineering Reference Manual, Communications and Fieldbuses, Rack Modules, Forcing I/O signals*.

1.7 Redundancy

1.7.1 General description of CPU redundancy


It is possible to increase the availability of the process station D-PS by means of CPU redundancy.



A redundant supply voltage for a sub-rack can be provided by the link module DLM 02. A bus redundancy (Ethernet redundancy) can be implemented between two star couplers.

The CPU redundancy is implemented in such a way that the user of Freelance Engineering and of Freelance Operations sees only one process station. The fact that a redundant process station has two CPU modules is only noticeable initially in the configuration and later in the status evaluation within commissioning or operation. A redundant process station otherwise behaves like a non-redundant process station with only one CPU module (single-machine model).

Hardware structure of a redundant process station

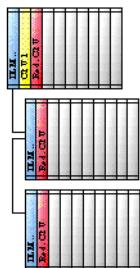

d7173us.bmp

In a redundant process station, two CPU modules type DCP 10 must be plugged in and connected correctly via the redundancy link. The redundancy link (Coax 2/AUI 2) is an Ethernet connection between the two CPU modules and is used for the synchronization of the redundant CPU modules.

The possible slots of the CPU modules for the sub-rack DRA 02 are slots 0 and 1. If the CPU modules are installed in different sub-racks, then slot 0 should be used in each case.

The sub-rack DRA 01, as of hardware index 4, is corresponding to DRA 02 and is also usable for redundancy.



A CPU module must always be plugged into slot 0 of a central processing unit.

See also [Mounting and Installation Instructions](#).

If power supply redundancy is also desired, the link module DLM 01 must be exchanged for the DLM 02. The DLM 02 enables two DPW 01/02 power supplies to be connected. A system message is sent if a power supply fails.

A possible power fail can be evaluated with the help of a system variable and used in the applications program.

Important restrictions with an upgrade

- For an upgrade with redundancy mode, it is necessary to check the I/O EPROMs of all I/O modules of this process station.
- A not redundant operation with V2 I/O modules is possible for projects which are to be operated without redundancy, so that it is not necessary to change the I/O EPROMs for such non-redundant applications. V2 I/O modules (DEA3.56, D2A1.04, DPT2.04, DIO1.06, DLM1.03 or less) which are plugged into a redundant system will generate a system message (Slot empty). The status LED of this modules will be flashing orange.



I/O modules with I/O EPROMs up to Version 3 as well as the new CPU module DCP 10 must not be operated in process stations with the software status of the V2!

- All variables of a redundant resource must be written in process image mode. If the variable cannot be configured this way, the content of these variables is not redundancy-capable, i.e. the variable value is not current in a redundancy toggle.
- Programs and function blocks of a non-redundant task will perform a cold start after a redundancy toggle.

- For projects and recipe programs (Freelance Formulation), the sequences appertaining to a PLI modules (sequential programs) together with the PLI module in the redundant task must be configured. It is necessary to position the tasks with the PLI modules in the project tree above the SFC programs.
- No structural changes of the configuration in routine operation can be performed in the commissioning without the associated resource being stopped.
- It is necessary to initialize the resource if boot parameters such as number of objects, PRAM, I/O protocol etc. are changed in the header of the resource.

Hardware and software requirements for CPU redundancy

- Two CPU modules type DCP 10 per redundant process station.
- All I/O EPROMs (firmware) of the I/O modules of the redundant process station must be redundancy-capable.

Synchronization

The active CPU module (Primary CPU) automatically ensures that the passive CPU module (Secondary CPU) can take over in the event of redundancy. The adjustment of operating system, user programs and redundancy data necessary for this is performed via a redundancy connection, the redundancy link. The connection is produced at the front of the CPU module and is implemented over an Ethernet cable, optionally 10BASE2 (Coax 2) or AUI cable (AUI 2).

One of the two CPU modules automatically becomes Primary CPU with bootstrap of a process station. The second CPU module establishes that it detects a Primary CPU on the station bus and logs on at the Primary CPU as Secondary CPU.



A newly plugged-in CPU module recognizes automatically that another module is already active on the stations bus and moves automatically into the passive status. Exception: if the second CPU module (which is intended to operate as redundant CPU module) is loaded with the operating system of a Gateway CPU.

In the adjustment between the active CPU module and a passive CPU module, a connection is established via the redundancy link. The operating system and the user program are first transmitted from the Primary CPU to the Secondary CPU.

The Secondary CPU performs a cold start with these data and then logs on at the Primary CPU. The current process data are then transmitted to the Secondary CPU. After successful transmission, both CPU modules move to “sync” status. From now on, the Secondary CPU is ready for a bumpless redundancy toggle. The relevant process data are balanced cyclically.

The synchronization runs in parallel with the processing of the applications programs in the process station.

Redundancy toggle

With redundancy, a bumpless toggle is achieved between the active CPU module (Primary CPU) and the passive CPU module (Secondary CPU), so that:

- the outputs of the I/O modules are retained under CPU failure,
- the internal statuses (module data, variable values) are retained,
- operating system, configuration and working data are balanced automatically between the active and the passive CPU modules.

If any of the following occur at the Primary CPU, a redundancy toggle is initiated **deliberately** between Primary CPU and Secondary CPU:


- the Prim/Sec toggle switch of the CPU module is actuated,
- the Prim/Sec button of the resource is actuated in commissioning mode,
- the reset switch is actuated > 5 s, resulting in a cold start of the Primary CPU,
- the system function "Force redundancy toggle" is executed.

If the following have been established by the self-test diagnosis, a redundancy toggle between Primary CPU and Secondary CPU **is forced**:

- the watchdog has responded: a hardware fault has occurred on the CPU module,
- a power fail of the power supply at the CPU module is reported,
- a network fault (Ethernet) has occurred,
- a “fatal software error” has occurred.

Redundancy statuses

Status diagram of the active CPU module (Primary)

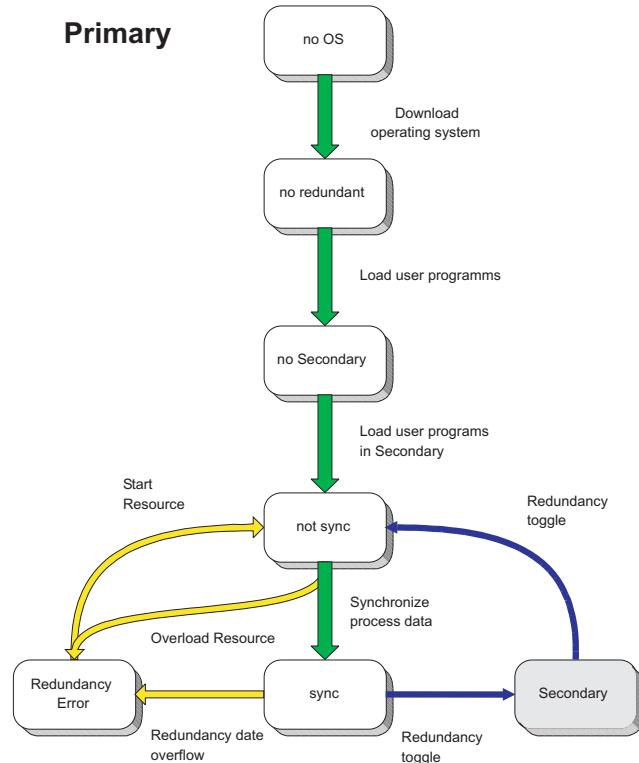


di1784us.eps

no operating system	No operating system loaded.
not redundant	The process station has been configured as redundant resource. The operating system is loaded but the user programs is not yet completely loaded.
no secondary	Operating system and user programs are completely loaded. The Secondary CPU has not yet logged on at the Primary CPU.

not sync	The Secondary CPU is present, the operating system and the user programs have been loaded but the process statuses have not yet been adjusted and the synchronization not yet therefore concluded.
sync	Normal status of the redundant process station. The Secondary CPU is synchronized and ready for a redundancy toggle. The cyclic data adjustment between the two CPU modules runs during the program processing.
redundancy error	<ul style="list-style-type: none">• Redundancy not possible. The CPU module cannot achieve the status “sync”. By restopping and then restarting the resource, it is again attempted to reach the status “sync”. The cause of this may be that it is not possible to complete the loading of the user programs successfully.• The system loading is too high, the redundancy link cannot be maintained. The task cycle times have been configured too short.

Status diagram of the passive CPU module (Secondary CPU)

Secondary

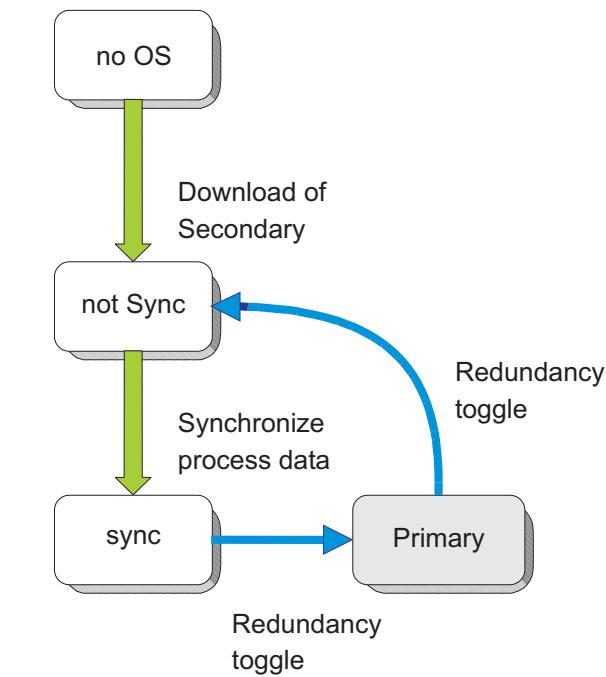

di1783us.eps

no operating system	No operating system loaded. The Secondary CPU is waiting for the transmission of the operating system and the user programs.
not sync	The Secondary CPU has logged on at the Primary CPU: the operating system and the user programs are loaded but the process statuses have not yet been adjusted and the synchronization not yet therefore concluded.
sync	The Secondary CPU is synchronized and ready for a redundancy toggle. The cyclic data adjustment between the two CPU modules runs during the program processing.



The redundancy Status of a resource can be evaluated using the system variables `xxxx.RedState`.

See *Engineering Manual, IEC 61131-3 Programming, Variables, System Variables*.

1.7.2 Configuration

To configure a redundancy, the redundant resource with the tasks must be configured in the project tree and the CPU modules in the hardware structure.

- There is a new resource type for redundant process stations in the project tree. As well as the redundant process stations, it is also possible to configure non-redundant process stations in a system. Both redundant and non-redundant tasks can be configured within the redundant resource.
- In the hardware structure, two CPU modules are mounted in the process station, and 2 IP addresses for a process station are allocated in the network configuration.

Redundant resources and tasks in the project tree

The following new project objects can be configured in the project tree:

- Redundant process station
- Redundant task (cyclic)
- Redundant default task (PLC mode)

A redundant task has so-called redundancy data. These are data of the process image and of the function blocks for which a data adjustment is performed after each cycle. This ensures that a redundancy toggle can take place at any point in time.

So that the data of a redundant task are redundancy-capable, all variables of a redundant task must be written in process image mode.

Not only the redundant task (TASK/RED), but also tasks of the previous type (TASK) can be configured under the redundant resources. Thus only those functions of the user program which also have actually to be redundant need to be configured redundantly within a redundant resource.

A new system task can be configured under the redundant resource, a redundancy start task. The **RedSt-Task** is activated at a redundancy toggle, and implemented

once irrespective of the cause the toggle before the user tasks are calculated. Applications programs can be configured here specially for the redundancy toggle.



It is possible by using a block import of part projects to make a resource redundant automatically by means of the new menu **Edit > Import block as redundant**. This means that the project objects are created and all variables (only with appropriate option) are written in process image mode.


Exporting the individual process stations makes it possible in the reimport to accept the modules mounting and the I/O channel assignments, which would otherwise be lost.

Mount and activate redundant hardware

A redundant process station type must be configured in the hardware structure.

The following steps are necessary for this:

- Select the system node (HWSYS) in the tree view or a process station position in the graphic view
- Select **Insert**
- Select the redundant process station type PSR
- Allocate a redundant resource (typed PS/RED in the project tree) with **Resource allocation**
- Mount both CPU modules

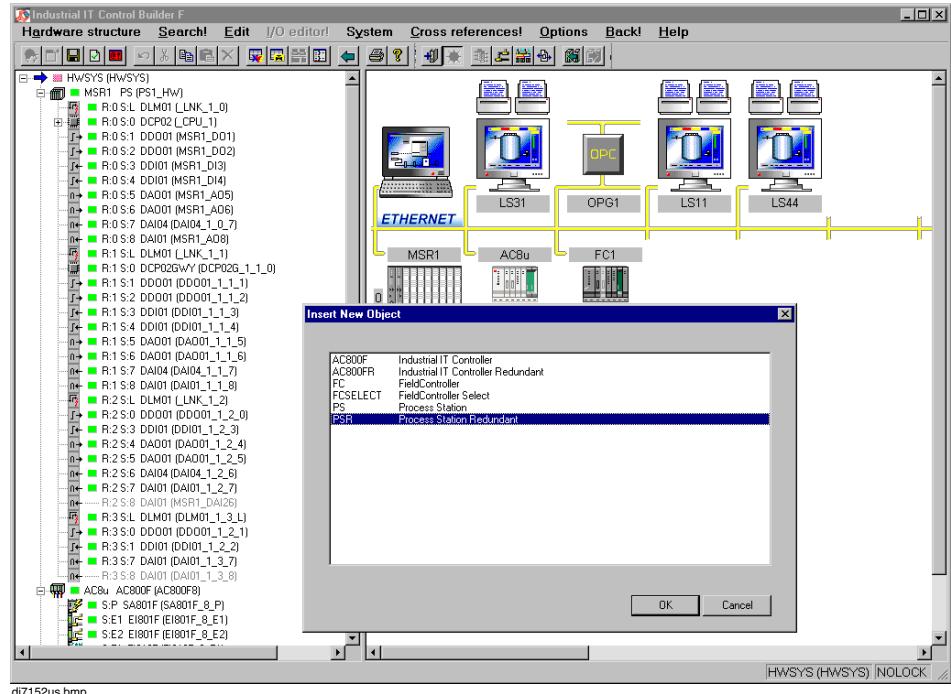

A redundant process station always features 2 CPU modules. Redundancy link is automatic when inserting a second CPU module.

The following slot combinations are possible for a redundant process station:

CPU module 1	CPU module 2	Rack DRA 01	Rack DRA 02
Rack 0/Slot 0	Rack 0/Slot 1	not possible	OK
Rack 0/Slot 0	Rack 1/Slot 0	OK	OK
Rack 0/Slot 0	Rack 2/ Slot 0	OK	OK
Rack 0/Slot 0	Rack 3/ Slot 0	OK	OK
Rack 0/Slot 0	Rack 4/ Slot 0	OK	OK

Network configuration

A redundant process station has a resource-ID (previously station number) and a dedicated IP address for each CPU module.

 Which of the CPU modules is Primary and which is Secondary is not defined by IP address 1 and IP address 2.

Network Configuration

Type	Name	Res. type	Res. name	Res. ID	IP address 1	IP address 2
GWY	GWY11	D-GS	DG2	21	172.16.1.10	
GWY	GWY5	D-GS	DG1	25	172.16.1.25	172.16.2.25
VIS	OS4_HW	D-OS	LS44	23	172.16.1.23	172.16.2.23
VIS	OS3_HW	D-OS	LS11	202	172.16.0.102	
GWY	GWY2	D-GS	OPG1	200	172.16.1.21	172.16.1.22
VIS	OS1_HW	D-OS	LS31	21	172.16.1.10	
PS	PS2_HW	D-PS	MSR2	22	172.16.1.6	
PS	PS3_HW	D-PS	MSR3	5	172.16.1.5	
PS	PS4_HW	D-PS	MSR4	24	172.16.1.24	
AC800FR	AC800FR4	D-PS/RED	AC82	7	172.16.1.8	172.16.1.18
AC800FR	AC800FR7	D-PS/RED	AC81	99	172.16.1.8	172.16.1.18
PSR	PSR5_HW	D-PS/RED	PSrd	3	172.16.1.3	172.16.3.3
FC	FC3	D-PS	FC1	4	172.16.1.4	
AC800F	AC800F8	D-PS	AC8u	14	172.16.1.14	
PS	PS1_HW	D-PS	MSR1	2	172.16.1.2	

Buttons: Edit, OK, Cancel

File: d7154us.bmp

1.7.3 Technical performance

- The link monitoring between the CPU module (Primary) and the I/O modules is performed at 250 ms / 500 KBit/s (1250 ms / 100 KBit/s)
- The CPU modules (Primary and Secondary) are monitoring each other. The Secondary-CPU detects a failure of the Primary (redundancy toggle) within 20 ms / 500 KBit/s (40 ms / 100 KBit/s). The Primary detects a failure of the Secondary within 250 ms / 500 KBit/s (1250 ms / 100 KBit/s).
- An automatic redundancy toggle is performed within less than 5 seconds if the active CPU module (Primary) fails.
- The adjustment of the operating system and configuration between the Primary and Secondary CPU are performed in less than 30 seconds after loading the

process station. This is valid for loading the configuration (load whole station, changed objects, ...) and for plugging a new CPU module.

1.7.4 Changing a not redundant process station into a redundant one

1. Export from every process station which should be redundant
 - a) the block of the individual resources in the project tree and
 - b) the block of all modules of the process stations in the hardware structure.



You can automatically make a resource redundant by performing a block import of partial projects, using the menu items **Edit > Import block as redundant**. The project elements are then created, and all variables are written using the process image. If the process stations are exported, their modules and the I/O channel assignment can be taken over when they are re-imported and will not be lost.

2. The variables of the task to be implemented redundantly must be described in process image mode, otherwise they will not be redundancy-capable. Please check your user programs for variables which are not described in the process image (column P in the variables list). If you consider that these variables cannot be written in process image mode because the information within the task must be immediately available and must not only be updated at the end of a task cycle, then you should renew the resource assignment of the variables or move the program list and sequential function charts individually (see also next item).
3. The resources intended to operate as redundant resources must be deleted. The redundant resources will otherwise be renamed automatically when imported into the project pool, because objects with the same names will certainly still be present in the project tree. Alternatively insert the redundant task under newly-inserted redundant resources and move the program list and sequential programs individually. Please do not forget the content of the system task. This method must be chosen where it is not possible to describe all variables in process image mode or where it is not necessary to operate all tasks redundantly
4. In the project tree and using **Edit > Import block** as redundant, insert the resources which were previously exported as redundant resources into the project pool

5. Renew the resources assignment for the variables. This can be done manually or automatically
6. The global system variables of the previously non-redundant resources which were used in programs or graphics still have the former resource allocation as an integral part and must be changed possibly to a new resource allocation.



These now undefined identifiers are reported as errors in the plausibility check.

7. In the hardware structure then import all individually exported blocks of the process stations into a redundant process station so that all information about the equipment and the I/O modules is there once again.



When changing a rack-based process station PS into a redundant FieldController AC 800FR, always import the I/O modules individually as a block under the CAN master DNETP.

8. Allocate the redundant resource to the redundant process station
9. Plausibility check the project.

Index

B

Break point 44

C

Cabinet name 30

Commissioning

 Hardware structure 49

CPU redundancy 53

D

DAI01 23

DAI02 23

DAI03 23

DAI04 23

DAI05 23

DAO01 23

DCO01 23

DCP02 23, 31, 34

DCP02GWY 31

DCP10 23, 31, 34

DCP10GWY 31

DDI01 23

DDI02 23

DDI03 23

DDI04 23

DDI05 23

DDO01 23

DDO02 23

DDO03 23

DDO04 23

Debugger 44

Default name
 module 24

Detail view

 module 51

DFI01 23

DLM01 23, 31, 33

DLM02 23, 31, 33

E

Engineering station 12

EPROM download 13

F

Force state 53

H

Hardware structure 11, 21

I

I/O bus (CAN) 28

N

Network configuration 63

No Module state 52

Node 49

O

Operating system 13

 download 15

P

Power fail 20

 signal 20

Prim/Sec button 40

Primary CPU	55
Program	
list	48
PS	11, 21
PSR	24 to 25

R

Rack bay name	30
Redundancy data	55
Redundancy link	55
Redundancy toggle	56
Redundant process station	60
Redundant resource	
State display	38
Redundant task	60

S

Secondary CPU	55
Shutdown	20
State	
No module found	52
wrong module type	52
State display	50
Program list	48
task	42
Synchronization	55
System	
view	12

T

Task	42
error message	44
state displays	42

W

Wrong type state	52
------------------------	----



www.abb.com/freelance
www.abb.com/controls

We reserve the right to make technical changes to the products or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not assume any responsibility for any errors or incomplete information in this document.

We reserve all rights to this document and the items and images it contains. The reproduction, disclosure to third parties or the use of the content of this document - including parts thereof - are prohibited without ABB's prior written permission. All rights to other trademarks reside with their respective owners.

Copyright © 2019 ABB.
All rights reserved.